


**FORESHIFT**

# Installation Instructions

- Fiesta ST MK8
- Focus MK4 1.5 150PS (B6+ Gearbox)
- Focus MK4 1.5 184PS (B6+ Gearbox)
- Ford Puma ST 200PS

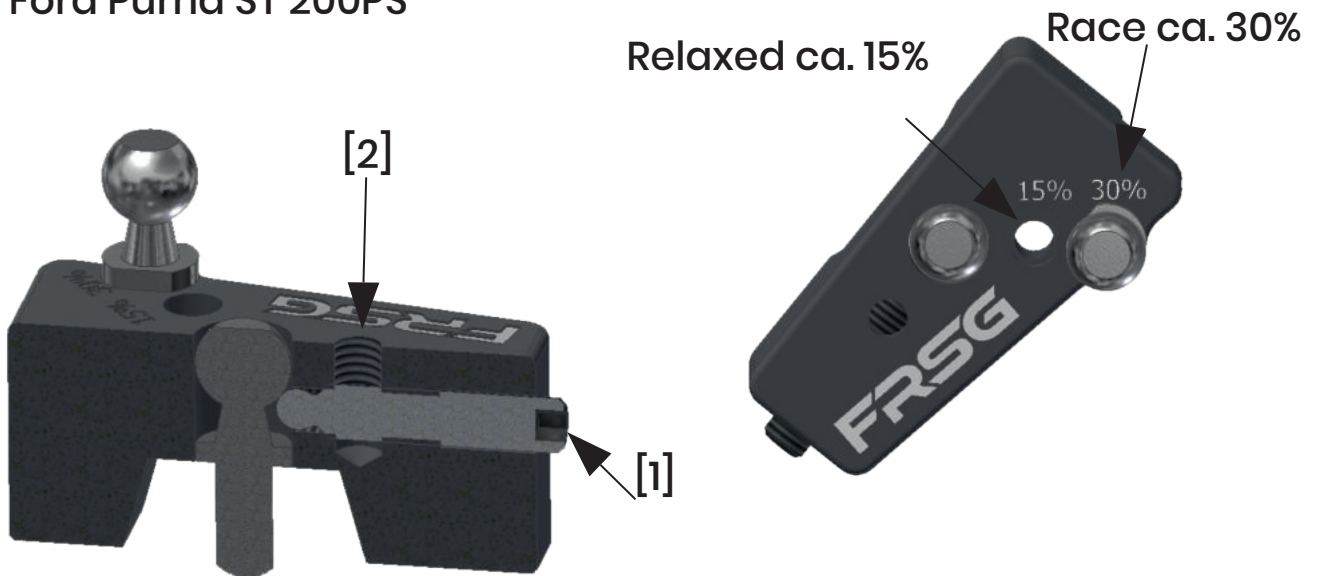

1. Screw the ball stud tightly into the desired shortening point
2. Dismantle intake manifold
3. Remove upper part of air filter box (unplug sensor)
4. Detach shift linkage from ball pin
5. Put short shifter over original ball pin
6. Tighten grub screw [1] (Allen key 3)
7. Screw on grub screw [2] (only serves to secure grub screw [1])
8. Clip shift linkage into new ball pin.
9. Reinstall upper part of air filter box and intake pipe.  
(Re-insert sensor!!!)

*If you have problems with the installation or need further information, you can watch our installation tutorial on YouTube.*

*Just use the following QR Code:  
(<https://youtu.be/VWaulKuVX9w>)*



We will be happy to answer any questions about the product or provide assistance with installation if you don't know what to do.

Write us an e-mail to [info@foresight-shop.de](mailto:info@foresight-shop.de)  
and we will help you as soon as possible.