

FORESHIFT

Installation Instructions


- Hyundai I30 N-Line (1.4 T-GDI)

(We recommend that the installation be carried out by qualified specialists!)

1. 2x clips [1] of the intake unlock by pressing lightly
2. Loosen hose clamp [2] (SW10) at air filter box
3. Loosen hose at divert-air valve
4. Remove intake hose
5. Loosen 3x screws [3] (SW10) at air filter box




6. Pull out the air filter box upwards
7. Make sure that the key is outside the car
8. Remove battery negative terminal and put it on its side (secure against accidental touching)
9. Remove battery positive terminal
10. Loosen the fastening [4] in the middle in front of the battery

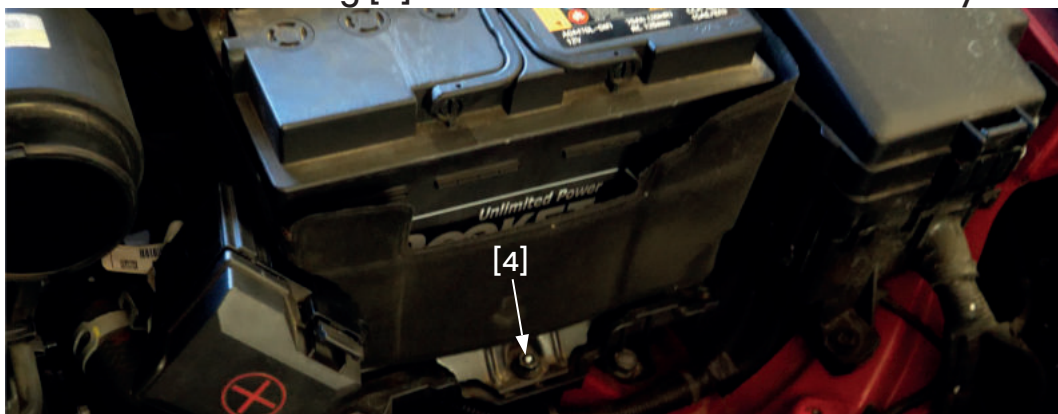

11. Remove battery

12. Unscrew 3x screws (SW10) [5] of the retaining plate of the battery.
13. Unscrew 1x screw (SW10) [6] of the holder of the ECU.
14. Put the ECU on the side
15. Unscrew 3x screws (SW12) [7]

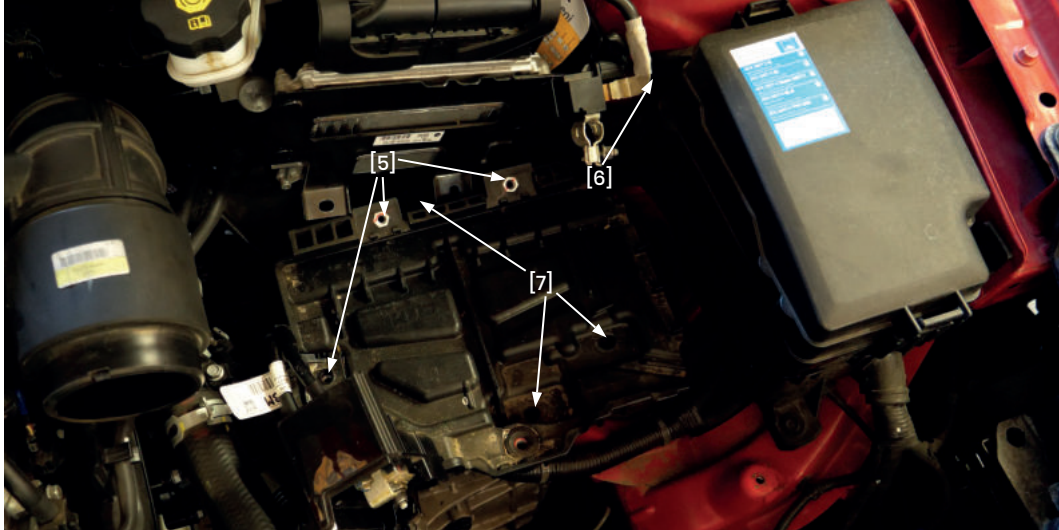


16. Remove battery plate
17. Pull out safety cotter pin [8] from shift cable.
(Caution: Danger of loss!!!)



18. Remove shift cable from the mount



19. Place the Short Shifter on the Mounting
20. Tighten grub screw (SW2.5) [9] to lock in position
21. Slightly tighten top locking screw (SW3) [10]
22. Push original safety split pin [11] onto original holder
23. Place shift cable on Short Shifter
24. Secure with enclosed safety cotter pin
25. Check for correct function of gearshift

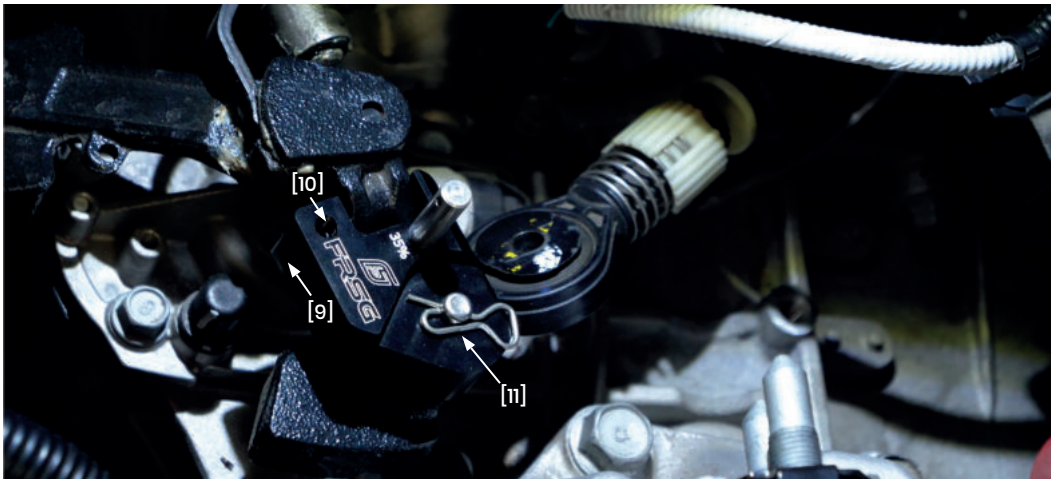

26. Installation in reverse order

If you have problems with the installation or need further information, you can watch our installation tutorial on YouTube.

*Just use the following QR Code:
(https://youtu.be/_BlmQibH2c4)*



We will be happy to answer any questions about the product or provide assistance with installation if you don't know what to do.

Write us an e-mail to info@foresight-shop.de
and we will help you as soon as possible.