


FORESTUFF

Installation Instructions

- Ford Focus ST MK3 vFL

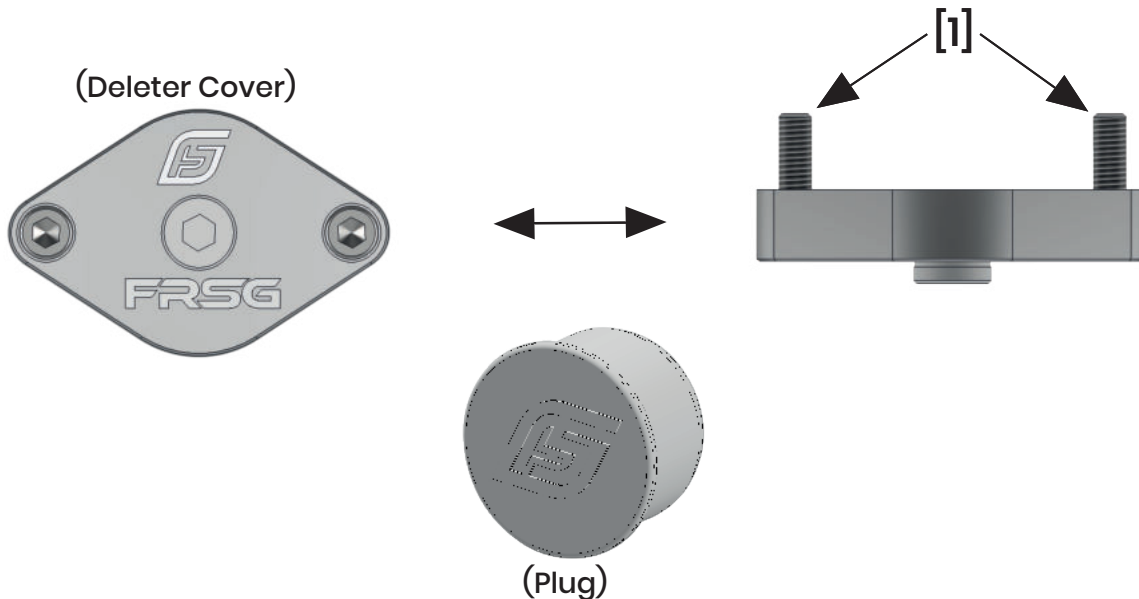

1. Carefully remove engine cover
2. Loosen hose clamp (Wrench Size 7) on air filter box
3. Disconnect plug on air filter box
4. Loosen suction hose completely
5. Carefully unclip the air filter box
6. Unscrew soundsymposer on intake manifold (Wrench Size 8)
7. Screw on the deleter cover with the 2 screws [1] supplied.
8. Stake out the hose of the symposer and everything that is connected with it (also the box to the left of the battery box (Wrench Size 7), as well as the plug that is in it)
9. Follow hose to approx. the center, below the windshield wiper and pull from the pull connection
10. Insert enclosed plug

If you have problems with the installation or need further information, you can watch our installation tutorial on YouTube.

*Just use the following QR Code:
(<https://youtu.be/tjiYy2F2QxY>)*



We will be happy to answer any questions about the product or provide assistance with installation if you don't know what to do.

Write us an e-mail to info@foresight-shop.de
and we will help you as soon as possible.